


Steps:

- 1) Attach base [1] to post using bolt.
- 2) Attach square plates [4] to curved vertical using bolts.


 NOTE: Square plate [4] must rotate to left and right before installing clamshell.
- 3) Attach clamshells [5] to square plates [4] using hex nuts.
- 4) Insert iPad and feed wire through holes as shown in detail.


Rotate clamshell to turn iPad from portrait to landscape orientation


Lock

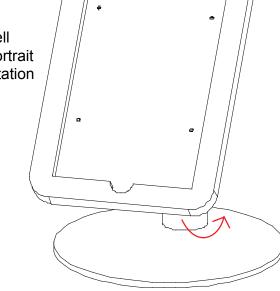

When assembled

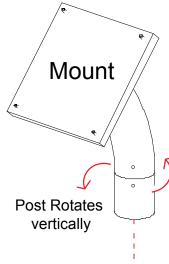

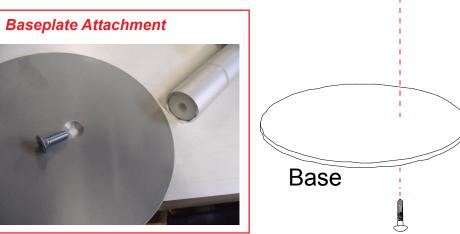


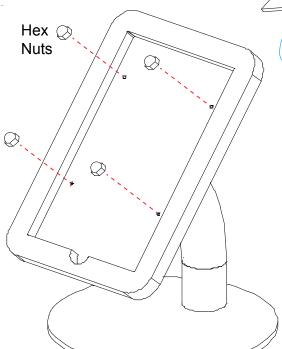



Wire Access

Optional Cover for Home Button

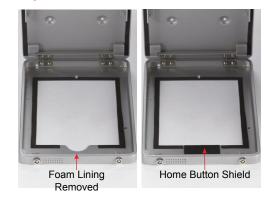

- Remove foam lining from inside bottom of clamshell as shown.
- 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.

NOTE: This is a permanent fix and can't be easily removed.